



1907 Woodland Ave.
Coffeyville, KS 67337
Phone: (620) 251-9100
Fax: (620) 251-2622

INSTALLATION INSTRUCTIONS BIGBOY BRACKETS

1995-2001 CHEROKEE XJ MODEL JEEP
DRIVERS SIDE
JBBXJ250DRIVER

1. Remove seat from the Jeep retaining the original bolts and flange nuts as you will use them to reattach seat frames to the floor of the Jeep. Be sure to disconnect the seat belt indicator wire from beneath the seat.
2. Place removed seat on it's back and remove (4) 13mm flange nuts (A) holding the factory slides to the seat and remove the slides.
3. Bolt on the BigBoy Brackets (E) using the (4) $\frac{5}{16}$ " x 1" carriage bolts (B) supplied. Use the flatwasher (C) and the nyloc nut (D) to secure the brackets to the factory slides. Make sure the extra 3" of the bracket is toward the front of the seat.
4. Before you can bolt the BigBoy Bracket and factory slide on the left floor bracket you must make two cuts in the left seat bracket and bend the tab up to the vertical side of the seat frame (see FIG. 2). You can now bolt the left BigBoy Bracket with the factory slide to the floor bracket. The right seat frame does not need modified.

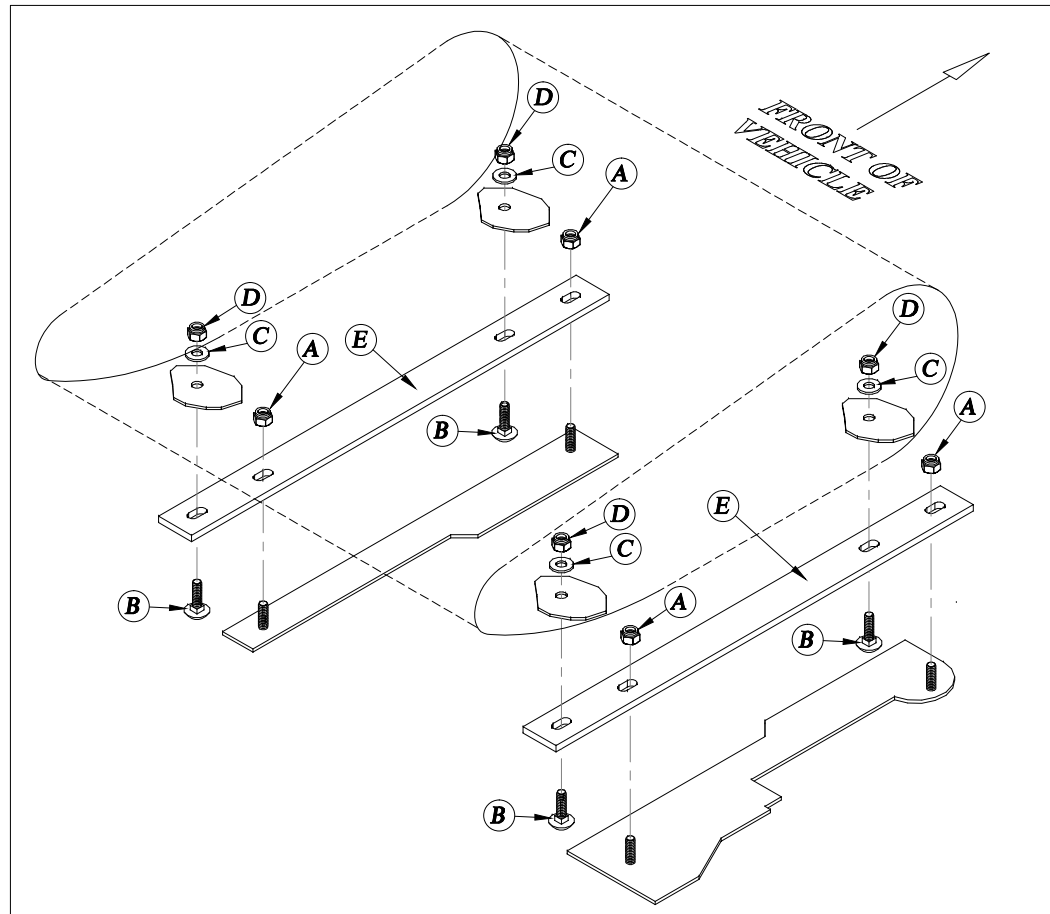


FIG. 1 DRIVER'S SIDE INSTALLATION

5. Now you can bolt the seat back into the Jeep and enjoy 3" additional leg room. Be sure to reconnect the seat belt indicator wire underneath the seat.

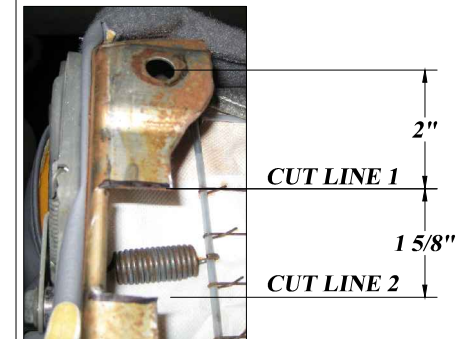


FIG. 2 SEAT FRAME MODIFICATION