

## **Liability Release**

The purchaser of this product agrees that the manufacturer of this product has no responsibility or liability for errors in installation and/or resulting injury and/or accidents resulting from or associated with use and/or installation of this product.

Purchaser agrees to release manufacturer from any and all liability for personal injuries including death and property losses or damage occasioned by, or in connection with any activity or accommodations for use and/or installation of this product, either professionally installed or self installed.

Purchaser furthermore agrees to hold harmless and indemnify said manufacturer organization(s) its directors, employees and agents, for any liability sustained by use and/or modifications of product or vehicle, including claims for damages, losses, injuries, and expenses arising out of or resulting from use of product.



1907 Woodland Ave.  
Coffeyville, KS 67337  
Phone: (620) 251-9100  
Fax: (620) 251-2622

# INSTALLATION INSTRUCTIONS

## MODEL NO. JAYJ150 ARMRESTS

FOR THE YJ MODEL JEEP

1. Remove the door closure strap by removing the two screws holding them in place.
2. Attach the armrest bracket (A) to the door, using (2) of the #10-24 x 3/4" button allen head screws (D) supplied. The armrest attaches to the door using the same holes that previously held the door closure strap.
3. Mount the polyurethane cushion (B) to the armrest bracket, using (2) of the #10-24 x 3/4" button allen head screws (D) supplied, adjusting the fore and aft position to suit your comfort.

\*Note: To mount the armrests on some CJ models, you must enlarge the holes in the armrest bracket to 1/4" and mount the armrest bracket to the door using 1/4"-20 x 3/4" button allen head screws (not supplied).

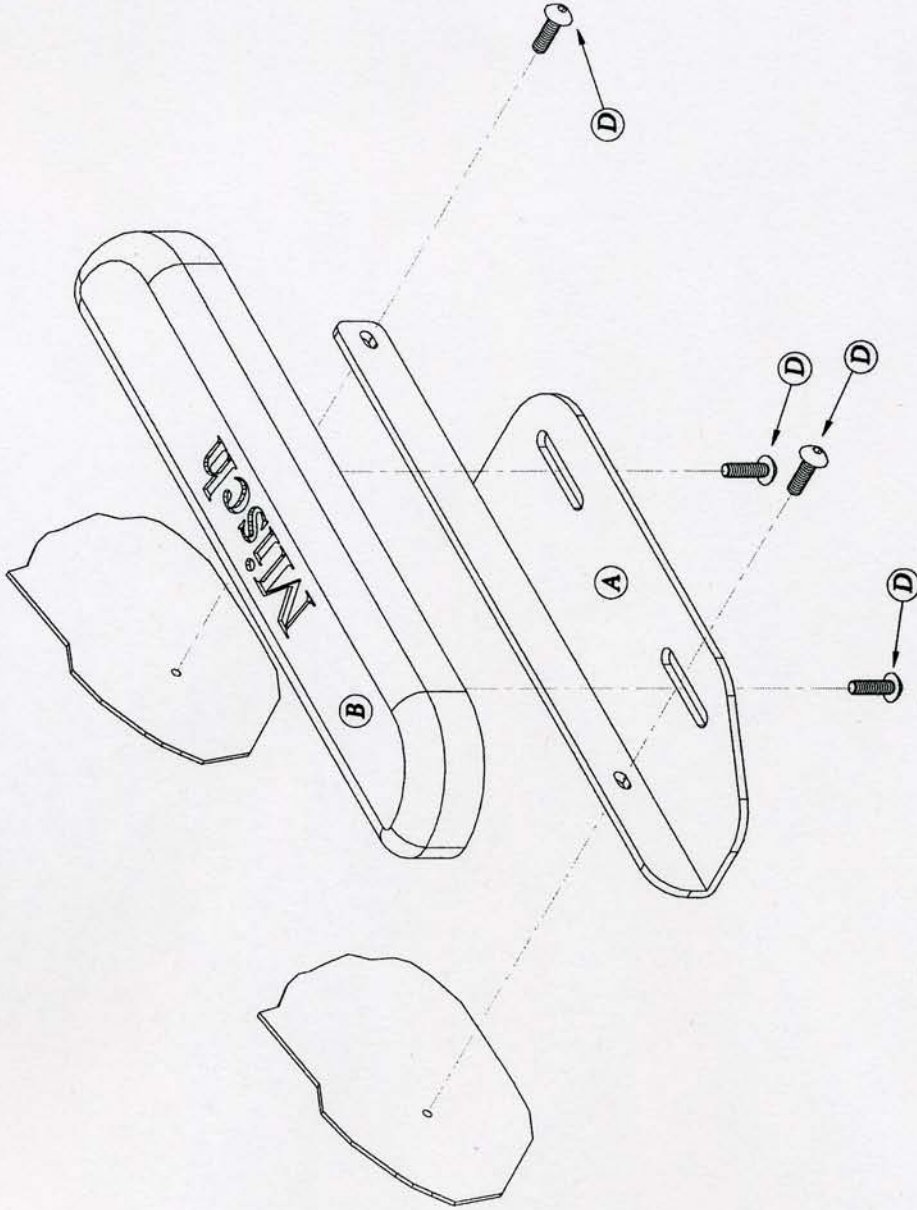


FIG. 1 YJ MODEL ARMREST INSTALLATION