



1907 Woodland Ave.
Coffeyville, KS 67337
Phone: (620) 251-9100
Fax: (620) 251-2622

INSTALLATION INSTRUCTIONS BIGBOY BRACKETS JEEP LIBERTY DRIVER'S SIDE

1. Remove and save the four bolts holding the seat frame to the floor. These will be reused when installing the new brackets.
2. Remove seat from vehicle.
3. Attach the left driver's side bracket (L) to the floor using two of the bolts (A) that were removed in step 1. Place thru the two elongated slot holes in the bracket as shown. **Do not tighten at this time.** From the bottom side of the bracket, place one 7/16" x 1" carriage bolt (B) in the front elongated slot and the 7/16" x 1/2" carriage bolt (C) in the back slot as shown, with the threads pointing upwards.

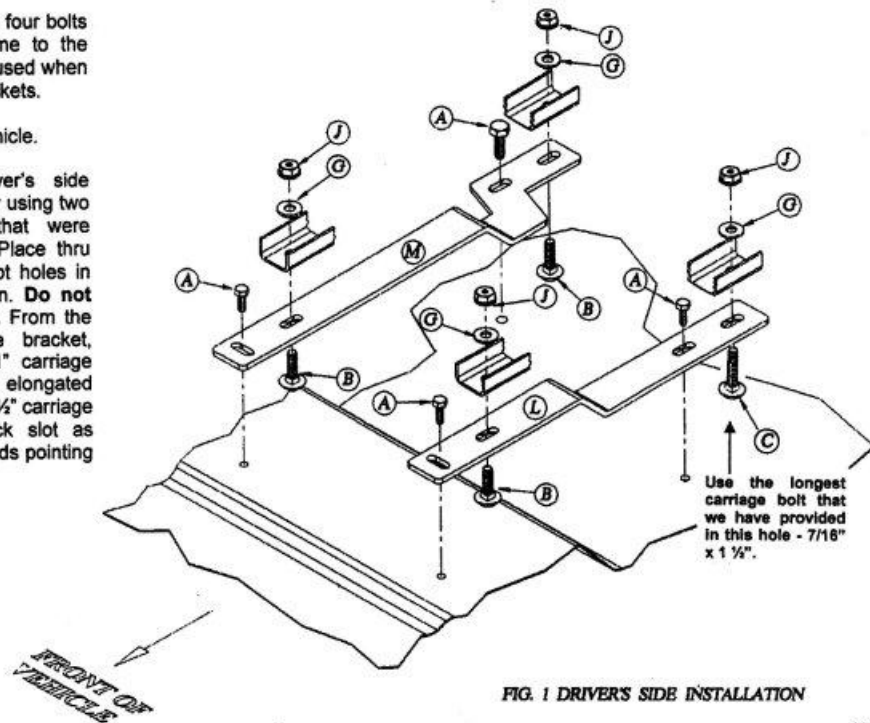


FIG. 1 DRIVER'S SIDE INSTALLATION

4. Attach the driver's side right bracket (M) to the floor using two of the bolts (A) that were removed in step 1. Place thru the two elongated slot holes in the bracket as shown. **Do not tighten at this time.** Place the two 7/16" x 1" carriage bolts (B) in the remaining holes as was done in step 3. The front of the right bracket should be moved as far to the right as the slot will allow. Now the two bolts holding the right bracket to the floor can be fully tightened.
5. Place the seat on the new brackets, allowing the protruding carriage bolts to go thru the seat frame. Once the seat frame is located with all four carriage bolts protruding thru the seat frame, the washers (G) may be placed over the carriage bolts and tightened using the appropriate flange nuts (J) that are provided. At this time, fully tighten all of the remaining nuts and bolts.

Now that the installation is complete, you should have approximately 3" more leg room for the driver's seat.